


Flanged Tank Overflows

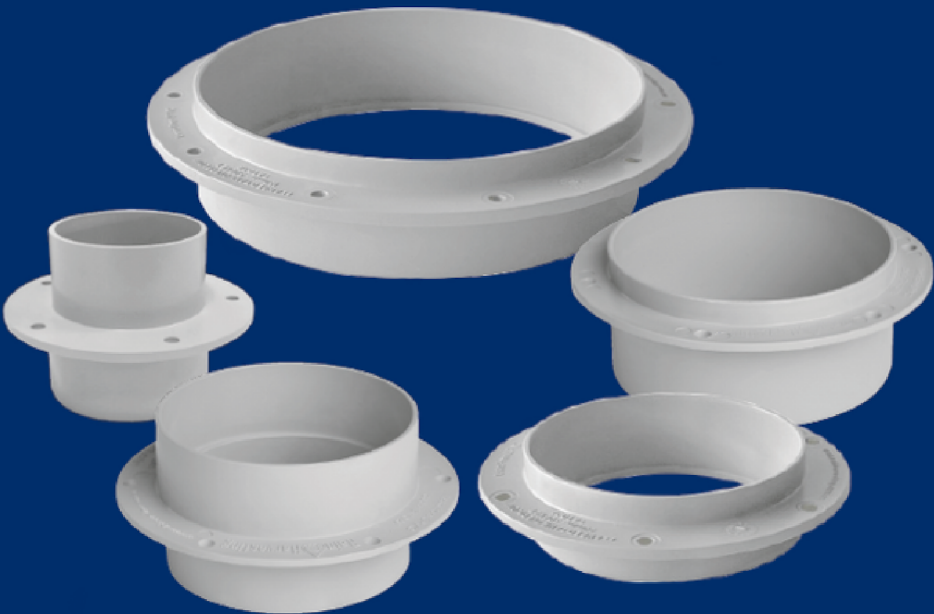

Installation and Specification Guide

PRODUCT DETAILS

A flanged overflow fitting for use with flat wall tanks.

The flanged design allows you to install it with either a gasket or sealant - whatever your preference is. The straight-through design sets the overflow level at the base of the fitting, which you can then connect to with any standard plumbing fittings or mosquito-proof screens.

Code	Size	Country
TATO62	50mm	Australia
TATO29	90mm	
TATO37	90mm	
TATO22	100mm	
TATO38	150mm	
TATO22	100mm	New Zealand
TATO38	150mm	
TATO22	110mm	South Africa
TATO22	110mm	UK
TATO22	110mm	EU
TATO22	110mm	India

Installation

WHAT'S IN THE BOX?

- Tank Overflow Standard
(for Flat Wall Tanks)

TOOLS/MATERIALS YOU MAY REQUIRE

- Marker pen
- Hole saw
- Silicone
- Screws
- Screwdriver

NOTE: If space is available consider a High Level Tank Overflow to increase the storage in your rain water tank.


INSTALLATION

1 - If you do not have an existing tank overflow hole in your tank, use your overflow as a template to mark the size of the hole you need to cut in the side of your tank, then cut using a hole saw. Ensure that the bottom of the hole you cut sits lower than the bottom of the tank inlet and/or tank inlet screen.

2 - Apply silicone to the flange on your tank overflow, push it into the tank overflow hole, then screw in place through the provided screw holes.

Product Specifications

Flanged Tank Overflows

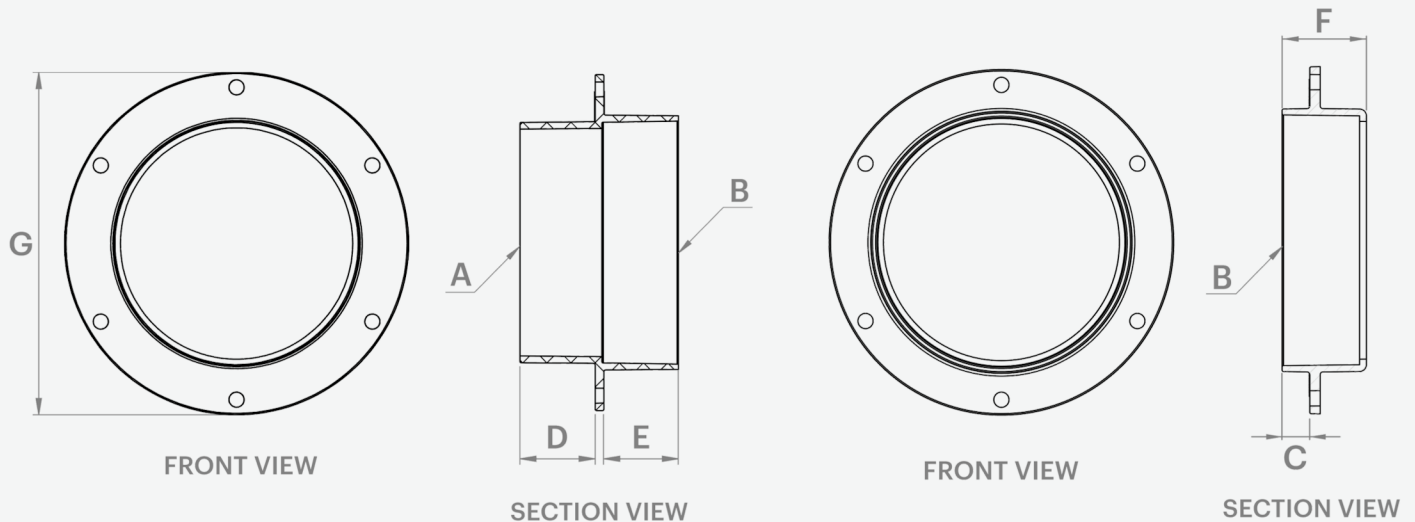

Country	Code	A	B	C	D	E	F	G	Recommended Tank Hole Size
Australia	TATO62	50 M	50 F	-	28	38	-	91	59
	TATO29	90 M	90 F	-	28	28	-	125	95
	TATO37	-	90 F	10	-	-	28	126	98
	TATO22	-	100 F	10	-	-	55	146	121
	TATO38	-	150 F	10	-	-	40	200	168
New Zealand	TATO22	-	100 F	10	-	-	55	146	121
	TATO38	-	150 F	10	-	-	40	200	168
South Africa, UK, EU & India	TATO22	-	110 F	10	-	-	55	146	121

All dimensions are in mm unless otherwise stated.

Fitting guide:

F = Female / Socket Fitting

M = Male / Spigot Fitting (Pipe size)

IP = In-Pipe Fitting

Maintenance

When properly installed, your tank overflow should be maintenance-free.

We recommend pairing your tank overflow with a mosquito-proof screen or flap valve to prevent mosquitoes and other pests entering your tank through the overflow outlet.



A common misconception about collecting rainwater is that all you need is a roof, a tank and some rain. This 'tanking' approach cannot always be relied on to deliver the volume – or quality – of water that you require. That is where we can help.

With some thought, your rain harvesting system can provide you with cleaner water and lots of it. Whether you're completely reliant on tank water or wanting to keep the garden green, our simple steps will help you achieve your goal.

The Rain Harvesting approach to rainwater collection involves using tested and proven products to make quality rainwater available for use in and around your property. You don't need much to get started and you will be surprised how easy it is to get the most out of your rainwater system.

[How can we help you?](#)

COMPLIANCE

- AS/NZS 4020:2005 Testing of products for use in contact with drinking water

DISCLAIMER This product specification is not a complete guide to product usage. Further information is available from Rain Harvesting Pty Ltd and from the installation and Operating instructions. This specification sheet must be read in conjunction with the installation and Operating Instructions and all applicable statutory requirement. Product specifications may change without notice. © Rain Harvesting Pty Ltd

RAIN HARVESTING

by Blue Mountain Co

For more information or to find out
how we can help, just give us a call on

+61 7 3248 9600

Or visit our website at

rainharvesting.com